

Calibration Certificate

Calibration provided by : EKO Instruments Co., Ltd.

1-21-8, Hatagaya, Shibuya-ku, Tokyo, 151-0072, Japan

Manufacturer : **EKO Instruments Co., Ltd.** Issue Date :

Model: MS-712

Description : Spectroradiometer Calibration Date : July 29, 2022
Serial Number : S13099.11 Calibration Procedure : 110225-1.1
Accessories : Calibration method : Lab calibration

Certificate Number: \$13099.11-EX22-348\$

Calibration uncertainty

Wavelength range	Combined uncertainty	Exposure time settings
900nm - 950nm	+/- 4.52 %	500ms
950nm - 1600nm	+/- 4.84 %	500ms
1600nm - 1700nm	+/- 23.67 %	500ms
900nm - 1700nm	+/- 1.5nm	_
(wavelength accuracy)	+/- 1:Jillii	-

Calibration condition

Conditions	Unit	Note
Ambient temperature	25 °C	-
Orientation of lamp filament	Vertical	-
Orientation of spectroradiometer	90 degrees Tilted	-

Standard lamp

-	-	Note
Lamp type	OL-FEL-C Tungsten Halogen	1000W
Lamp S/N	F1726	-
Calibration date	5/16/2022	Max. 50 hours

M.Tanioku/ Manager of Mfg. Dept.

H.Yamato/ Inspector

)4. Yamato

Calibration procedure

The MS-spectroradiometer is calibrated against a NIST traceable tungsten-halogen OL-FEL standard lamp at a distance of 50 cm. The standard lamp has a known spectrum and the absolute irradiance is calibrated at several wavelengths. By measuring the spectroradiometer's detector responsivility in counts as a function of the irradiance at corresponding wavelengths, the sensitivility of each photo diode array pixel is converted into absolute units (W/m²/µm).

The calibration function is determined by averaging 10 single measurements, measured separately for 3 different wavelength intervals each with a fixed exposure time. This is to use optimal output characteristics of the detector. Finally the calibration function is uploaded to the spectroradiometer firmware for automatic conversion of measured count into absolute units.

Calibration Uncertainty

The combined uncertainty of the calibration function for each wavelength interval is based on individual uncertainties contributed by the standard lamp, calibration set-up and spectroradiometer performance properties.

Source		Uncertainty		
		900 - 950nm	950 - 1600nm	1600 - 1700nm
Standard Lamp calibration	Gooch&Housego	2.30%	2.30%	1.48%
Lamp current	Calibration set-up	0.04%	0.04%	0.01%
Measurement repeatability	Spectroradiometer	1.00%	1.00%	8.00%
Non-Linearity	Spectroradiometer	1.00%	1.00%	1.00%
Alignment	Calibration set-up	1.00%	1.00%	1.00%
Temperature dependency	Spectroradiometer	0.50%	0.50%	0.50%
Cosine response	Spectroradiometer	0.00%	0.00%	0.00%
Stability	Spectroradiometer	1.00%	1.00%	1.00%
Stray Light	Spectroradiometer	0.50%	1.00%	8.50%

Uncertaint $y = \{(Standard\ Lamp\ calibratio\ n/2)^2 + (Lamp\ current/2)^2 + (Measuremen\ t\ repeatabil\ ity)^2 \}$

- + $(Non Linearity)^2 + (Alignment)^2 + (Temperatur e dependen cy)^2 + (Cosine response)^2$
- + $(Stability)^2 + (Stray\ Light)^2 / \sqrt{2} \times 2$

Traceability to NIST Standard

OL-FEL lamps are calibrated by direct comparison to a Gooch & Housego NIST traceable FEL 1000-Watt lamp. Gooch & Housego NIST traceable lamps are used for a maximum period of 50 hours (will be replaced afterwards).



Test Report of Cosine Response

Calibration provided by: EKO Instruments Co., Ltd.

1-21-8, Hatagaya, Shibuya-ku, Tokyo, 151-0072, Japan

Manufacturer : **EKO Instruments Co., Ltd.** Issue Date :

Model: MS-712

Description : Spectroradiometer Measurement Date : July 20, 2022
Serial Number : S13099.11 Measurement Procedure : 110225-1.1

Certificate Number: \$13099.11-EX22-348\$

Cosine response

Zenith angle [°]	South side Error [%]	North side Error [%]	East side Error [%]	West side Error [%]
0	0.00	0.00	0.00	0.00
10	2.05	1.92	1.73	1.85
20	1.67	1.18	1.09	1.58
30	1.56	0.06	1.12	0.87
40	1.90	-0.73	-0.06	0.57
50	1.03	-1.35	-0.69	-0.27
60	0.05	-2.06	-0.44	-1.04
70	-0.23	-4.01	-1.34	-2.88
80	-4.55	-8.24	-6.00	-5.48

M.Tanioku/ Manager of Mfg. Dept.

H.Yamato/Inspector

) J. Yanato

Cosine Response Measurement procedure

The cosine reponse of the Spectroradiomter is measured on a optical bench with a solar simulator as source. The solar simulator (AAA grade) is well adjusted with light parallelism, irradiance non-uniformity, and temporal stability. The zenith reponse is measured in angles of 10 degrees in 4 azimuth orientations (east, west, south, and north) and listed as the discreapancy relative to the ideal cosine reponse.

$Cosine Response = \{(Output_\theta/Output_0degree)/Cos(\theta)-1\} \times 100$

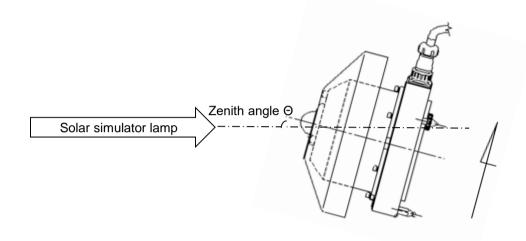


Figure 1. Configuration when measuring the South Direction

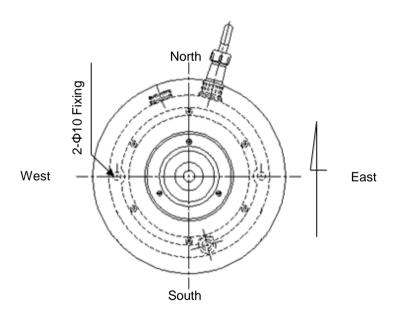


Figure 2. Direction of the Spectroradiometer (Image from top)